



### **Cleaning the Oven/Broiler Thermocouple**

- 1) Remove Grill and Large burner flame spreader
- 2) Undo 4 screws holding top on and remove top of stove
- 3) Locate the thermocouple wire for the oven burner. It will be the copper wire coming from the rear of the oven and leading into the oven valve.
- 4) Remove the thermocouple from the valve with a 8mm wrench and sand the tip lightly with a fine grade sandpaper or scouring pad
- 5) Replace the thermocouple and reassemble the stove

\*NOTE\* Do not kink the thermocouple as this may cause it to work improperly. Make all bends gradual.